Hot Desking Administrator's Guide

Introduction

The Cloud Communications system hotdesking feature allows a user to login on any hotdesk phone to make and receive calls on that phone with his personal number. The user will also have access to his personal speed dial keys and function keys on the hotdesk phone while logged in. Once logged out, the hotdesk phone is available for a new user.

This guide for the system administrator describes how to set up hotdesking phones and users on the cloud communications system.

Hotdesk Phones

The Cloud Communications system administrator designates which SIP phones on the system can be used as hotdesk phones.

To do this, connect to the Administration portal of the system, select the Users tab followed by the link Sip Phone Provisioning.

To designate a phone as a hotdesk phone, tick the box in the 'Hotdesk' column, enter the MAC address of the phone and press Save.

These phones are limited to making emergency and internal calls when no user is logged in.

						User Settings					
SIP Phone Provisioning						User Status					
	none	i i ovisioninie	>			User Functions					
						Voice Mail					A
Export	Export CSV Import CSV					Message Forwarding			Number Per Page: 50 🔻		
						Hotline Users				Page 1	2 3 4
Index •	User	Username	Hotdesk	MAC Address	Location	IP Phone Registration	Proxy	STUN Server	STUN	Last	Custom
	Number					SIP Shared Extensions	TOIL		TOIL	1100151011C0	conng
1	101	Main Operator x101(*)		80:5E:C0:4C:A8:86		SIP Registration/ SCA Status	0		0	10/23/19	
2	1002	dub-8388332b(*)				SIP Phone Provisioning	0		0		
	1002	000 00000020()				IP Phone Statistics	0		0		
3	1003	Bob o Bobby		64:16:7F:01:DD:74		Call Record	0		0	16:14:54 10/18/19	
	104	D-L-D-L	_	00.04.50.74.50.05		Relative Levels	0		0	16:21:20	
4	104	POly BOD		00:04:F2:74:63:2F		Flip VoIP/ GSM	0		0	10/18/19	
5	105	Ext 105				Hotdesking	0		0		÷
			_			Connected Number Visibility					
6	106	DaveShaw		64:16:7F:BC:99:64		1 🔻	0		0		:
7	107	Extn 107		00:15:65:B5:02:CC		1 🔻	0		0	12:29:50 04/08/19	:
8	108	LabelleOperator x20	1	00:15:65:C1:91:B1		1 •	0		0	04:59:17	:
	400									05.01115	
9	109	Labelle_Noemi x202		64:16:/F:BC:99:4D		1 •	0		0		÷
10	110	LabelleSls_Dsk x203		64:16:7F:BC:99:BE		1 .	0		0	-	:
						571/0					

Hotdesk Users

The administrator designates which users are allowed to login to hotdesk phones. To do this, connect to the Administration portal, select the Users tab followed by User Functions. From the drop-down menu at the top left, scroll down and select the Hotdesking function.

To designate a user as a hotdesk user, tick the box in the Enable column and press Save.

A SIP phone can be designated as a hotdesk phone or as a hotdesk user but not both.

User Functions		User Settings User Status	?
		User Functions	
Function: Hotdesking v		Message Forwarding	Number Per Page: 50 🔻
		Hotline Users	Page 1 2 3 4
Index 🝷	User Number	IP Phone Registration	Enable
		SIP Shared Extensions	0 0 0
1	101	SIP Registration/ SCA Status	2
2	1002	SIP Phone Provisioning	2
3	1003	IP Phone Statistics	
	1005	Poletica Levels	
4	104	Flip VoIP/ GSM	8
5	105	Hotdesking	
6	106	Connected Number Visibility	0
7	107	Extn 107	
8	108	LabelleOperator x201	
9	109	Labelle_Noemi x202	0
10	110	LabelleSls_Dsk x203	

Hotdesk Status

The administrator can view current status of all hotdesk phones and see which users are logged in to them.

To do this, connect to the administrator portal and navigate to the Users tab and click the Hotdesking link.

The administrator can force a user off a hotdesk phone by clicking the logout button.



A Hotdesk Phone does not require a user license. If a user license has been attributed to a hotdesk phone, it can be removed and made available to another user. To do this, go to the Administrator portal Users tab, and click the User Settings link. On this page, disable the hotdesk phone and press Save.

Export CS	/ Impo	Import CSV								Number Per Page: 50	
Index •	Number	Name	E-mail Address	Mobile Number	PIN Code	Enabled (29/30)	Outgoing	; CLI	Send Welcome Email	Page Contacts	Actions
1	101	Extn 101		Hotdesk			None	Ŧ			
2	102	Extn 102			6218	×	None	٣	()	0	:
3	103	Extn 103			3003	۲	None	٣	()	0	:
4	104	Extn 104			2755	×	None	٣	()	0	*
5	105	Extn 105			2552	۲	None	•	()	0	* *
6	106	Extn 106			2281		None	٣	()	0	0 0
7	107	Extn 107			2093		None	•	()	0	0 0 0
8	108	Extn 108			5252		None	•	\bigcirc	0	: